



**DOUBLE SHOOTING
PYROWIZARD FLASH GUN**
Catalog No. MG02

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated below.

Directions:

Take the gun and insert an 'AA' Alkaline battery (not included) in the battery holder. It doesn't matter which direction the battery is turned. Without loading the gun, press the red firing buttons, one at a time, and look into the barrels. You'll see a glowing coil similar to the one in an automobile cigarette lighter. This glowing coil is the glo-plug. The fact that it glows tells you that the battery is operational and that the glo-plug is in good working order.

To prevent accidental firing while loading, remove the glo-plug clips from the glo-plugs now. (The glo-plug clip is a black clip at the end of a thin wire.) Be sure not to lose the tiny plastic insulating washers that fits between the glo-plugs and the glo-plug clips. Take two pinches of Flash Cotton, fluff them up, and insert one into each brass barrel. Use a blunt instrument to press the Cotton against the glo-plug coil. (The eraser end of a pencil works well for this.) Do not use a pointed instrument, the glo-plug coil is easily damaged. Take two pieces of Flash paper, 3" or 4" square, loosely ball them up (individually), and insert one into each brass barrel. Use a blunt instrument to gently push the Paper up against the Cotton.

Grip the Gun by the finger clip with the brass ear between the middle two fingers of your right hand. Bend the brass ear to fit shape of hand. Replace the glo-plug clips on the end of the glo-plugs. Be sure to use the insulating plastic washers. The Gun is now ready to fire. From this time forward, do not point the gun at any person or flammable object. Use your thumb to press the button and fire the gun. Only one Gun can be fired at a time, so don't press both buttons at once. Depending on the strength of the battery and the condition of the glo-plug, you may have to hold the button down for up to a full second to ignite the Cotton. A ball of fire streaking out of the barrel will result.

Caution:

Always remove the glo-plug clip before loading.

NEVER USE FLASH POWDER IN THIS DEVICE !! An explosion will result.

Never fire at people, animals or flammable objects.

Conduct a preliminary test in a safe location. The fireball can travel up to 20 feet.

Tips:

Make sure the insulating washer is in place or the Gun may not fire.

If Cotton is unavailable, a small wad of Flash Paper can be substituted.

If the glo-plug burns out, it can be easily replaced by screwing it outward from the brass barrel (counter-clockwise) with a small wrench. Don't over-tighten the new plug.

The brass barrel can be slid forward or back to suit your hand. The finger clips can be trimmed for a more comfortable fit. If the Paper shoots out without lighting, you used too much Cotton.

Warning:

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer. DANGER! USE AT YOUR OWN RISK!

NFPA 1126 Compliance Statements:

This product is intended for indoor use.

It creates a streaking flash of fire with no smoke.

An MSDS is not applicable.

It is manufactured by Theatre Effects, Inc., 642 Frederick St., Hagerstown, MD 21740 (301) 791-7646