



#MG04 FLINT FLASHER

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or *liability* that is the result of the user's failure to follow the specific instructions stated below.

DIRECTIONS:

Take the Flint Flasher and slide it down your index finger until it almost reaches your palm. Adjustments of the brass clip will be necessary. With the cup pointing upwards, and your palm supporting the bottom of the cup, strike the spark wheel with your thumb. Strike it a few times to break it in.

Take a small wad of Flash Cotton, fluff it up, and insert it into the cup. Be careful to keep the Cotton from being caught up in the flint wheel. The looser and fluffier the Cotton is, the more quickly it will burn and the greater the 'flash' will be. Put the Flint Flasher on your index finger and strike the spark wheel with your thumb. Be careful to keep your face at least two feet away from the unit. A flash of fire will result.

CAUTION

Never fire at people, animals, or flammable objects.

Always fire in the "cup-up" position.

Keep your face at least two feet from the Flint Flasher when firing.

NEVER USE FLASH POWDER IN THIS DEVICE !!!!!!!!!!!

Do not reload with cotton if the device is noticeably warm.

NEVER USE THE FLINT FLASHER TO IGNITE FLASH POWDER !!!!!!!!!!!

TIPS:

For a different effect, substitute Flash Paper for Flash Cotton. Since Paper burns more slowly, a smaller wad should be used, or the unit will get hot in your hand. Flash Paper is harder to ignite, so use only top quality Paper, not seconds. When loading Flash Paper in the cup, keep corners or loose ends upwards in front of the flint wheel to aid in lighting. A combination of Flash Paper and Cotton can also be used.

Sparkle Additive can also be used in the Flint Flasher. Simply pour a small amount of fine Sparkle Additive on top of the Cotton. The Flint Flasher should be ignited at arms length when using Sparkle.

Occasionally, the flint in the spark wheel assembly will have to be replaced. Flints are readily available at most drug stores. To replace, grasp the spark wheel assembly firmly with pliers and pull it out. The bottom of the assembly will unscrew, exposing the flint chamber. Be careful not to lose the spring and spring head inside. Drop in a new flint and reassemble.

When the wheel gets hard to turn, remove the flint, run the wheel under hot tap water and spin it. This will dissolve residue build-up. Allow the wheel to dry before replacing the flint.

WARNING!!!

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer.

DANGER! USE AT YOUR OWN RISK!

Questions?
Call us at (301) 791-7646
Email: service@theatreffx.com
Visit our website!
<http://www.theatreffx.com>

