



#MU04 MYSTIC GUITAR FLASH

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or *liability* that is the result of the user's failure to follow the specific instructions stated below.

Note: Examine and become familiar with this product before strapping it to your guitar.

DIRECTIONS:

Take the Guitar Flash and insert two 'AA' alkaline batteries (not included) in the battery holder. Install the batteries so that they are facing in opposite directions. Without loading the gun, press the brass contact at the end of the battery holder and look into the barrel. You'll see a glowing coil similar to the one in an automobile cigarette lighter. This glowing coil is the glo-plug. The fact that it glows tells you that the battery is operational and that the glo-plug is in good working order.

To prevent accidental firing while loading, remove the glo-plug clip from the glo-plug. (The glo-plug clip is a black clip at the end of a thin wire.) Be sure not to lose the plastic insulating washer that fits between the glo-plug and the glo-plug clip. Take a pinch of Flash Cotton, fluff it up, and insert it into the brass barrel. Use a blunt instrument to press the cotton against the glo-plug coil. (The eraser end of a pencil works well for this.) Don't use a pointed instrument because the glo-plug coil can be easily damaged. Take a piece of Flash Paper 3" or 4" square, loosely ball it up, and insert it into the brass barrel. Use a blunt instrument to gently push the paper up against the Cotton.

Replace the glo-plug clip on the end of the glo-plug, being sure to use the plastic insulating washer. The Gun is now ready to fire. From this time forward, don't point the gun at any person or flammable object. Go outside, or a safe distance from flammables, and shoot the gun by pressing the brass contact against the battery holder. Depending on the strength of the battery and the condition of the glo-plug, you may have to hold the button down for up to a full second to ignite the Cotton. A ball of fire streaking out of the barrel will result.

Now install the Guitar Flash on your guitar. It should be strapped onto the back of the headstock, with the cushioning material against your tuning pegs. Adjust the straps between the tuning pegs, make sure they are under your strings (straps against the neck), and secure them. Before pulling tightly, be sure the Guitar Flash is positioned where you want it; the straps are very difficult to remove after pulled tightly. Note also: your thumb should be able to reach and press the brass contact easily. Excess strap can be cut off. To remove a strap, push a large pin into the opening, pushing back the small catch inside.

CAUTION

Always remove glo-plug clip before loading.
NEVER USE FLASH POWDER IN THIS DEVICE!!!!!!!
Never fire at people, animals, or flammable objects; the fireball can travel up to 20 feet.
Never use your finger to push Flash Paper into the barrel.

TIPS:

Make sure the insulating washer is in place or the Gun may not fire.
If Cotton is not available, a small wad of Flash Paper can be substituted.
If the glo-plug burns out, it can be easily replaced by screwing it outward from brass barrel (counter-clockwise) with a small wrench. Don't over tighten the new plug.
When packing your guitar in its case, remove the batteries, or put a small piece of cardboard between the brass contact and the battery holder. Failure to do one of the above may result in dead batteries.

WARNING!!!

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer.

DANGER! USE AT YOUR OWN RISK!

