



#MU05 MYSTIC GUITAR SMOKE

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or *liability* that is the result of the user's failure to follow the specific instructions stated below.

Note: Examine and become familiar with this product before strapping it to your guitar.

DIRECTIONS:

Take the Guitar Smoke and insert two 'AA' alkaline batteries (not included) in the battery holder. Install the batteries so that they are facing in opposite directions. Note the Surefire Electric Match running from the red and black terminals to the Mini Flash Pot. When you replace it (a new one is needed for each shot), you'll want to install it so that it's positioned in the same manner.

You have two options with this product. You can use it to produce a flash of fire and smoke (#1), or a steady stream of colored smoke lasting up to 10 seconds (#2).

#1: Flash of Fire and Smoke. Take a pinch of Flash Cotton and wrap it around the match tip. This will ensure positive ignition. Now take a quarter-teaspoon of Flash Powder and wrap it up in a quarter-sheet of Flash Paper. Place this "load" in the Mini Pot. The unit is now loaded and ready to fire - be careful not to press the button switch before you're ready. Go outside, or a safe distance from flammables, hold the Guitar Smoke at arm's length with your face turned away, and fire by pressing the button switch. Depending on the brand and type of Flash Powder used, a flash of fire and a puff of smoke will result.

#2: Stream of Colored Smoke. Follow all the directions above except: instead of using Flash Powder and Flash Paper, use Smoke Powder and Slow Cotton. (You should still use a pinch of Flash Cotton wrapped around the match tip.) Take a ball of Slow Cotton (*entirely different from Flash Cotton*), and form it into a bowl or 'bird's nest'. Put the Cotton nest in a Mini Flash Pot. Fill the nest with colored Smoke Powder. Pull the edges of the nest up and over the top of the Powder to form a cocoon. Position the match tip so that it's touching the top of the Slow Cotton ball. Fire as in #1.

Now install the Guitar Smoke on your guitar. It should be strapped onto the back of the headstock, with the cushioning material against your tuning pegs. Adjust the straps between the tuning pegs, make sure they are under your strings (straps against the neck), and secure them. Before pulling tightly, be sure the Guitar Smoke is positioned where you want it; the straps are very difficult to remove after pulled tightly. Note also: your thumb should be able to reach and press the button switch easily. Excess strap can be cut off. To remove a strap, push a large pin into the opening, pushing back the small catch inside.

CAUTION

Always conduct a preliminary test in a safe location, especially when using a new brand or type of Powder.

Do not reload until the Pot has cooled.

Overloading the Pot with Powder will result in an explosion!

Always keep your face away from the Pot.

Never smoke while loading.

Do not fire in a location where flammable objects are within 8 feet.

TIPS:

For a different effect, use Flash only (no Powder).

This product can still be used if you don't have Flash Cotton, but you'll have to take care to ensure that the match tip is touching the "load".

WARNING!!!

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied.

It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer.

DANGER! USE AT YOUR OWN RISK!

