



#UL03 ULTRA CONFETTI LAUNCHER

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or *liability* that is the result of the user's failure to follow the specific instructions stated below.

DIRECTIONS:

When you first take the Confetti Launcher out of the box, you will note two skinny wires coming out of the side of the stack, and running to a red and black pair of terminals. This is the Surefire Igniter. Look into the stack and note the end of the igniter sticking one half inch into the center of the stack. When you replace the igniter (a new one is needed for each shot), you'll want to install it so that it is positioned in the same manner.

Take two full 8" by 9" sheets of professional grade Flash Paper, ball them up, and insert them into the stack. Push them all the way down using something flat or round, such as an old broom stick or dowel rod. Do not use a pointed object. Now fill the tube with Flameproof Confetti. Use the dowel to pack down the Confetti snugly; do not put any extra Confetti in on top. The Confetti shower can be altered by a loose or tight pack. Conduct a preliminary test outdoors to adjust to your needed height.

Remove the igniter leads from the red and black terminals by pushing on the corresponding release levers. Do not allow the igniter wires to touch the Confetti Launcher at all. Now plug the Launcher into a footswitch or switchbox, and plug the switch/box into 120V house current (a standard wall outlet). By switching the footswitch or switchbox on and off, you will see the red indicator on the Confetti Launcher light and go out. When the red indicator is lit, ignition power is being supplied to the red and black terminals. If a Surefire Igniter were in place, the Confetti would be launched as soon as the red indicator lit.

Set your switch so that the red indicator is not lit. Now reconnect the igniter leads to the red and black terminals. The Confetti Launcher will shoot a fireball as well as confetti, so be sure that there are no flammable objects within 6 feet. Your Launcher is now ready to fire. Throw the switch and instantly create a ball of fire and a shower of confetti.

CAUTION

NEVER USE FLASH POWDER IN THIS DEVICE!!!!!!!!!!!! An explosion will result.

Never insert the tip of the igniter in such a way that it touches any metal part of the Confetti Launcher. This could cause premature firing or misfiring, an electrical short and possibly an electrical fire.

An igniter is a one-time use product and must be replaced with each firing.

For best results, use only our low voltage "Surefire Igniters". Never replace the igniter or touch the red and black terminals when the red indicator is lit.

To avoid blowing circuit breakers and fuses, be sure that the line has a 20 amp fuse or breaker.

Do not reload until the stack has cooled.

Do not fire in a location where flammable objects are within 6 feet to the side of, or 8 feet above the launcher.

Always keep your face away from the stack.

Never smoke while loading.

Use only Flameproof Confetti.

TIPS:

For a different effect, use Flash Paper only.

For added safety, use one of our Ultra Firing Panels with test fire indicator lights.

WARNING!!!

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer.

DANGER! USE AT YOUR OWN RISK!



Questions?
Call us at (301) 791-7646
Email: service@theatreffx.com
Visit our website!
<http://www.theatreffx.com>

