



**PYROWIZARD FINGER
FLAME**
Catalog No. MG05

Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated below.

Directions:

Take the Finger Flame and pour lighter fluid into the wick chamber. Be careful not to get the spark wheel wet because lighting will be difficult. Wait a minute for it to soak in, then pour in some more. Place the Finger Flame on your first or second finger. Your palm and the spark wheel should be facing towards you. Bend the finer clips for a comfortable fit. Trim the clips if necessary.

Check to be sure that there is no lighter fluid on any part of the Finger Flame except the wick. The Finger Flame is now ready for use. Strike the spark wheel firmly with your thumb. A flame "appearing" from our fingertip will result.

Caution:

Always be sure there is no excess lighter fluid on any part of the Finger Flame. When loading, be careful to put lighter fluid in the chamber only.

NEVER USE FLASH POWDER IN THIS DEVICE!!

Never fire at people, animals, or flammable objects.

NEVER USE FINGER FLAME TO IGNITE FLASH POWDER!!

Do not reapply lighter fluid when the unit is warm.

Light the Finger Flame high, then draw it downward. Remember that heat rises.

Never raise your hand while the flame is lit.

Always hold your finger upright.

Tips:

The cupping effect may be necessary for the first strike, because the fluid must be hot or enclosed to produce ignitable vapors. Because lighter fluid evaporates so quickly, don't fill the unit until you are ready to use it, or not more than 1/2 hour ahead of time.

Overnight storage in the enclosed container may soften the insulation. Avoid sealing the unit for any length of time unless it is completely empty.

Keep the unit upright to avoid slow leakage of fuel.

When the wheel gets hard to turn, run the wheel under extremely hot tap water and spin it. This will dissolve residue build-up.

Allow the wheel to dry before using.

The wick can be adjusted for a larger or smaller flame; simply pull the wick out or push it back in.

The Finger Flame can also be used on the thumb. Use the index finger to strike.

The Finger Flame can be used to light dove bowls or candles that use lighter fluid. Use the spark wheel only to create a spark.

Warning:

Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer. DANGER! USE AT YOUR OWN RISK!

NFPA 1126 Compliance Statements:

This product is intended for indoor use.

It is manufactured by Theatre Effects, 1810 Airport Exchange Blvd #400 Erlanger KY 41018, 859-647-8844

An MSDS is not applicable.