



**PYROWIZARD UFK FLASH  
GUN**  
Catalog No. MG34

**Read these directions very carefully. This product uses flammable material and is for professional use only. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated below.**

**Directions:**

Unclip the brass barrel from the aluminum bracket, mount the bracket in any position, at any angle (pointing away from flammables, of course), and clip the barrel back in. Connect the red and black leads to a 1-3V DC switched power source (use of #MG35 UFK Ignition System is recommended). Without loading the barrel, press switch and peer in. You'll see a glowing coil; this is the glo-plug. Take a pinch of Flash Cotton, fluff it up and insert it into the barrel. Push it the whole way down against the glo-plug using the flat end of a pen or unsharpened pencil. Now take a quarter sheet of Flash Paper and stuff it in on top of the cotton. Press the button switch and instantly create a streaking fireball.

**Please Note:** The Glow-Plug will properly operate between 1-3v DC (aka 1-2 AA batteries). However, many battery manufacturers "over-charge" their batteries, which will damage (burn out) the Glo-Plug in the device. For best results, use off-brand Alkaline batteries OR use "slightly used" name brand Alkaline batteries. Another option is to simply use only 1 AA battery (instead of 2), which will reduce the voltage to 1.5v and will still work quite well with this system. Doing so will greatly extend the life of your Glo-Plug.

**Caution:**

Always unplug the battery pack from the device before reloading.

Never fire at people, animals, or flammable objects.

Never look into the pit when the device is loaded.

**Never use Flash Powder in a glo-plug device!** (An explosion will result.)

Always conduct a preliminary test in a safe location, so you'll know how much clearance space you need.

**Tips:**

If the glo-plug burns out, it can be easily replaced by screwing it outward from the brass barrel (counter-clock-wise) with a small wrench. Don't over-tighten the new plug.

If the Flash Paper shoots out without lighting, you used too much Cotton.

**Warning:**

**Read these directions carefully and follow them exactly. Misuse is dangerous. The manufacturer is not responsible for any injury or liability that is the result of the user's failure to follow the specific instructions stated above. This product is manufactured without any warranties, express or implied. It is for professional use only. It is not sold to minors. For more information, consult the technical manual "Special Effects with Fire and Smoke" available from us or your dealer. DANGER! USE AT YOUR OWN RISK!**

**NFPA 1126 Compliance Statements:**

This product is intended for indoor use.

An MSDS is not applicable.

Manufactured by Theatre Effects, 1810 Airport Exchange Blvd, Suite 400, Erlanger, KY 41018 859-647-8844